


Assembly of GravityStack 44

1


- A** Remove packing tape from ROLLER.
- B** Remove HEAD ASSEMBLY, lifting it out of LEG ASSEMBLY.
- C** Rotate HEAD ASSEMBLY 180° as illustrated and replace into LEG ASSEMBLY as shown.
- D** Unpack (4) ADJUSTING SCREWS & thread into legs as shown.

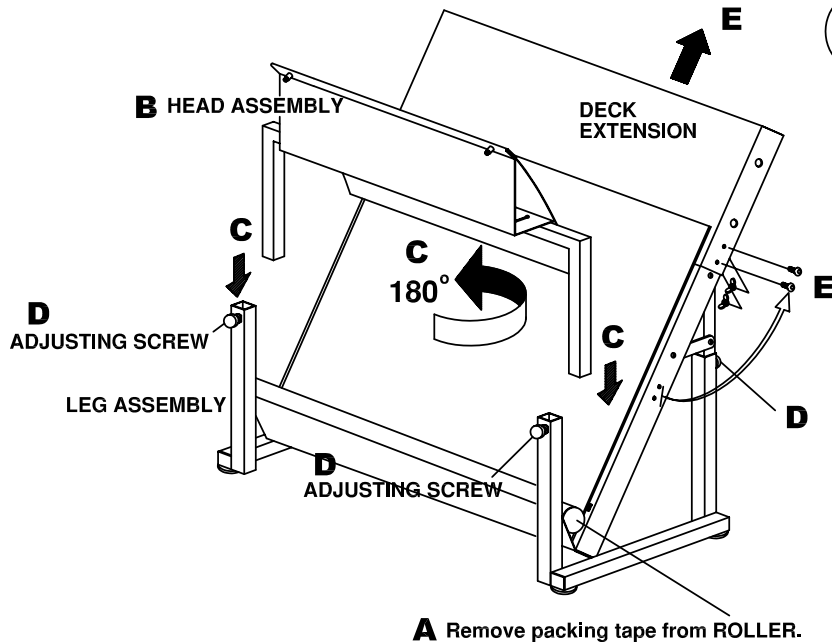

A Remove packing tape from ROLLER.

2

- E** Depending on plate size, DECK EXTENSION may be repositioned as shown, removing 1/2" SCREWS & WING-NUTS and repositioning them along with the DECK EXTENSION.
- CAUTION: IT IS UNSAFE FOR PLATES TO EXCEED TOP EDGE OF DECK.**

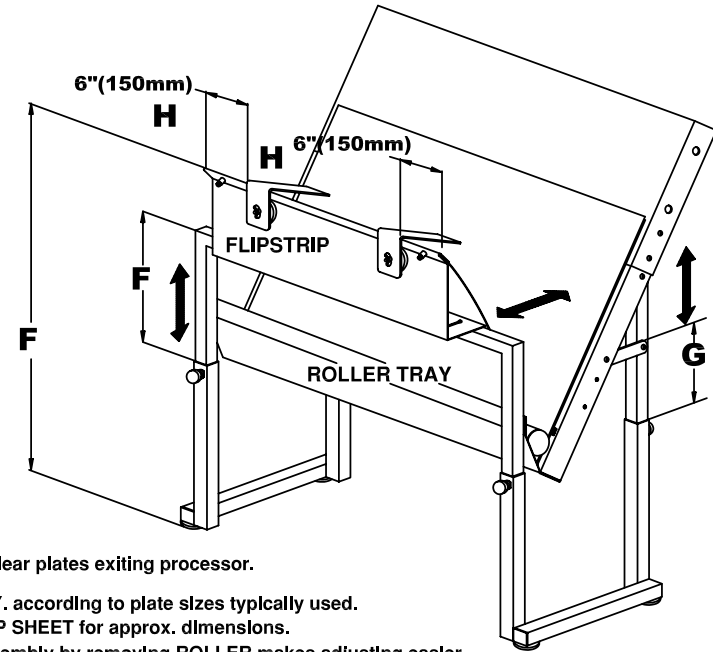

3

- F** Set HEAD height to clear plates exiting processor.
- G** Position DECK ASS'Y. according to plate sizes typically used. Please refer to SETUP SHEET for approx. dimensions. NOTE: Lightening assembly by removing ROLLER makes adjusting easier.
- H** Position FLIPSTRIPS in approx. location on HEAD as illustrated. NOTE: Second FLIPSTRIP (supplied) may be necessary on long plates.

RobertJamesDesigns,Inc e-mail: rjdesign@sbcglobal.net www.platestacker.com